



TOP VIEW OF HEADBOX
LOOKING DOWN

Print at "Actual Size" for a template to lay on top of headbox to mark hole locations before drilling.
Verify scale by measuring printed drawing, or just measure from headbox edges and mark drill points.

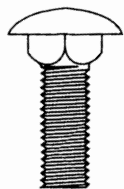

5/16" Carriage Bolt (not supplied)
3/4" bolt length preferred
1" bolt length acceptable if it clears fabric roll
Tip: cut bolt length down to any length

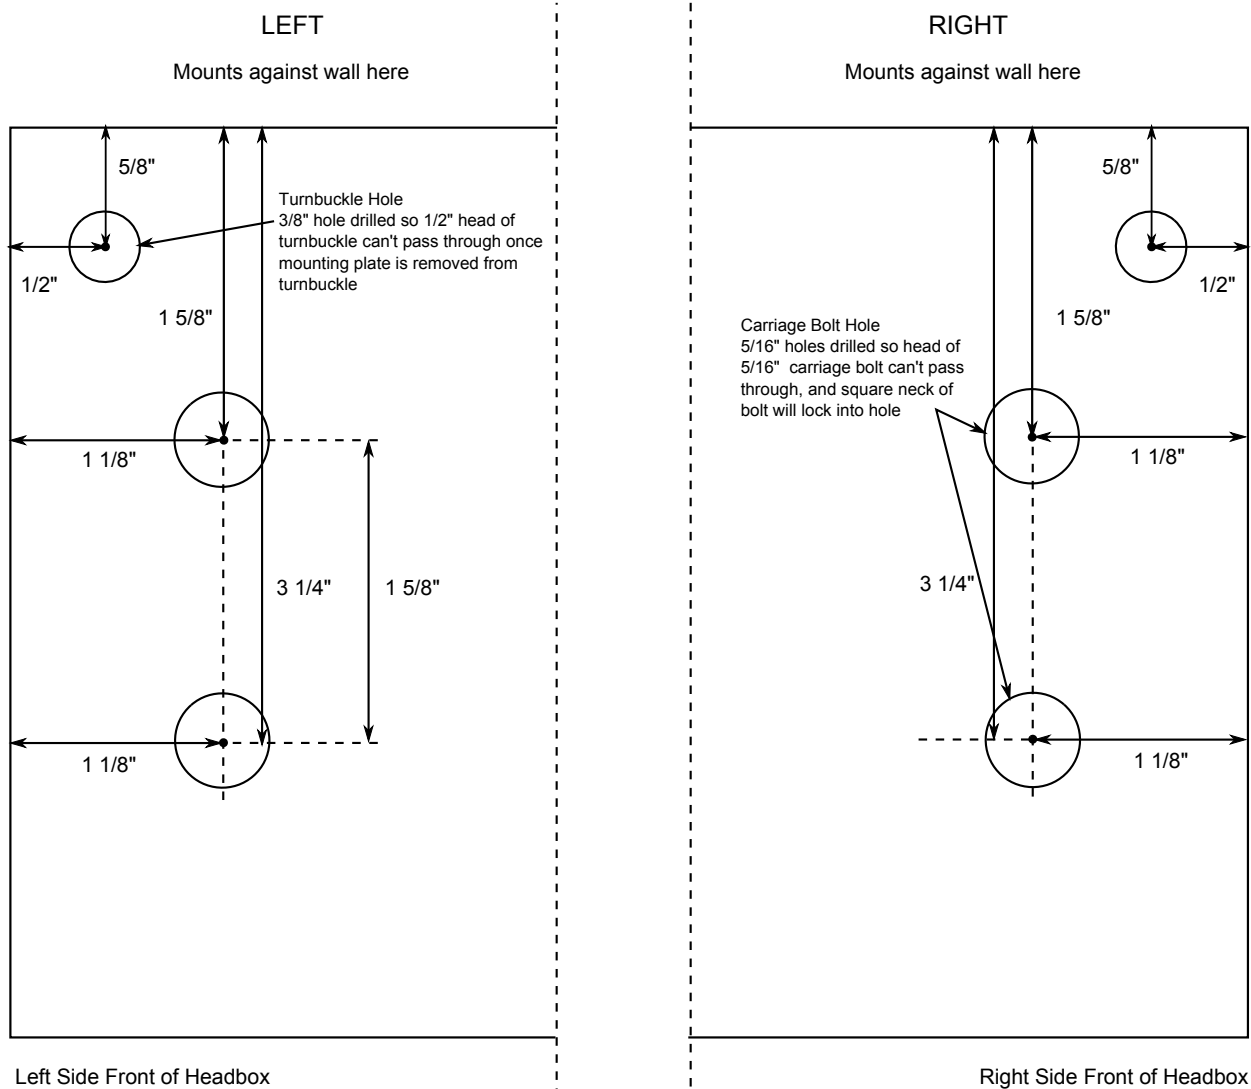